

Guardian Angel™

WINDOW GUARDS

 
How to Measure your Casement Windows

The Guardian Angel window guard is available in several sizes. It's important that your windows are measured prior to placing an order to ensure you receive the correct guard. Please be sure to read the warnings before proceeding.

WARNINGS

- Before installation, verify local building and fire codes are not being violated.
- This window guard is intended to protect against potential falls by children age 5 and under.
- Window guard must be installed in solid frame material or stud for proper operation.
- There should be no spaces exceeding 4 inches anywhere in the guarded area.
- Failure to follow all manufacturer's installation and safety instructions may reduce the effectiveness of this product and increase the risk of accidental window falls.
- Do not install a guard horizontally, or a guard meant for double hung windows, in a casement/sliding window. A child could use the guard as a ladder and fall through the unguarded area of the window.
- This product is not intended for installation outside of the home/window where it will be exposed to inclement weather.
- This product is not intended as a substitute for proper adult supervision.
- Guardian Angel Window Guards are not meant to protect children from intruders.

Casement windows consist of one or two separate window panels that crank open. The window panels either open outwards to the side or outwards and up. In both cases, the entire window opening must be guarded.

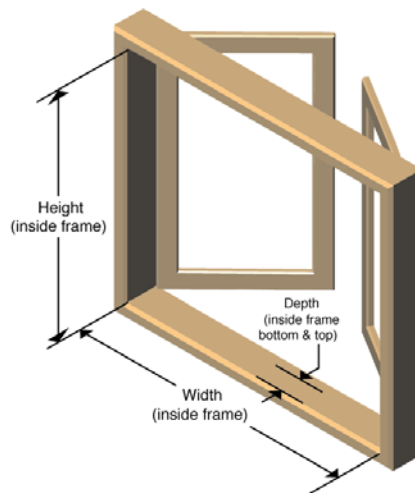


1) Measure the depth of the window frame where the posts will be mounted (inside top & bottom of window frame). *If there is a cranking device, shades, blinds, etc. in the frame that may interfere with the guard, or if the depth of the window frame is less than $\frac{3}{4}$ inch, the guard will need to be mounted on the outside of the window frame (on the molding or wall). The end posts are $\frac{3}{4}$ inch wide and need at least that much space for installation. Please keep in mind, the end posts also need to be screwed into solid material or stud for proper operation.

2) Once you determine if you are installing the guard on the inside or outside of the window frame (on the molding or wall), measure the height of that area. This will determine the height of the guard. The entire window opening needs to be guarded. If it is only guarded halfway up, your child could climb the guard and fall through the unguarded area at the top of the window.

3) Measure the width of the window opening. This will determine the width of the guard(s) and the number of guards required. If your window is over 26 inches wide, you will need more than one guard.

Cautionary Note:

 When measuring your windows, please keep in mind there should be no openings exceeding 4 inches in the guarded area.

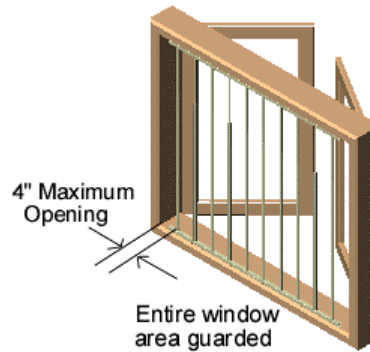

The above illustration shows a casement window guarded with two 5-bar guards, mounted side by side. Typically, the entire window opens on casement windows, therefore the entire opening must be guarded.

**For more information or to purchase guards, please contact
Automatic Specialties, Inc.**

1-800-445-2370

**Monday through Friday
9:00 AM to 5:00 PM EST**

**or visit
www.angelguards.com**